

Model Name: Urban 4x4

Model No.: KA-275



USER MANUAL

JET Games Corp *22 South Nova Road, Daytona Beach FL 32118

Tel: 386-255-1599

Fax: 0086-0760-88487512

Parts@Jetgamesusa.com

Web: www.jetgamesusa.com

IMPORTANT:

- ★ Read the manual before operating this machine
- ★ Keep this manual for your reference

CONTENT

1. General Information -----	3
1.1 Specification -----	3
1.2 Warning-----	4
1.3 Caution-----	4
1.4 Use-----	4
1.5 Maintenance -----	4
2. Parts and Functions -----	5
3. Game Instruction-----	6
4. Background Setting Instruction-----	7
5. Quick Trouble Shooting -----	9
6. Warranty -----	12

1.1 Specification

Model	Off-road X
Reference Code	KA-275
Power at rest	70W
Power in operation	380W
Dimensions (mm)	2000*1260*1420
Weight (KG)	207 KGS
Feeding voltage	220V/110V
Seats	2
Users range of ages	3 years+

1.2 Warning

- Do not set the machine where it could block emergency exits.
- Install the machine in a horizontal and stable surface.
- Do not bend the power cord by force or place heavy objects on it.
- Never plug or unplug the power cord with wet hands.
- Before inspecting the machine, make sure the power is OFF.
- Use always, for replacement parts, pieces authorized by M SKY.

1.3 Caution

- Do not put the power cord where people walk through.
- Use only a grounded outlet.
- Confirm the work power before use, in case of a short circuit.
- Do not lift the machine by part, Must be always lifted by the base.
- Power off, if the power cord is damaged and contact our staff for replacement.

 
1.4 Use

- Please make sure child sits well before insert coin.
- Do not up and down when machine in operation.
- Only one player on one seat.
- Do not lean on the machine when in use.
- This machine must be operated under adult's supervision.
- Please cut the power in Emergency.

1.5 Maintenance

- Please check and maintain the game regularly.
- Switch off the power before cleaning or replacing the parts of the game.
- Only qualified staff to inspect or test the electronic card.
- Please use clean and soft cloth to clean the game with gentle cleanser.
- Please use gentle cleanser.

2. Parts and Functions

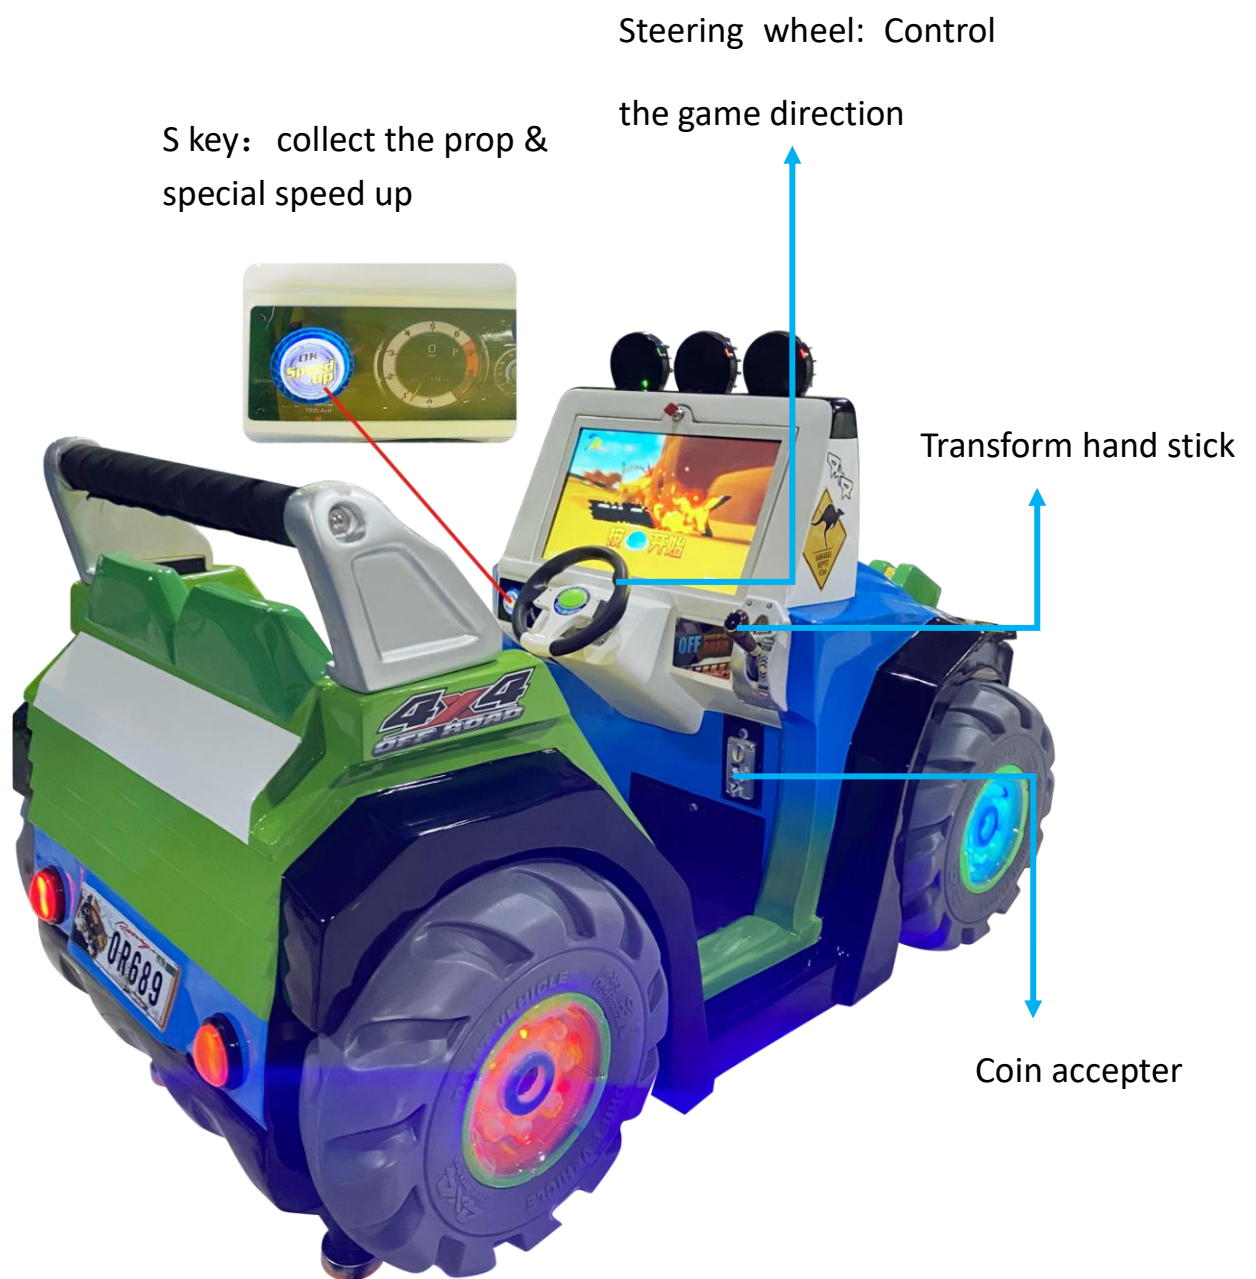

3. Game Instruction

- 3D racing car game, developed by UNITY engine, fluent image, real & exciting.
- Different interactive & vibration. Real racing feedback, cool & exciting。



How to play:

- Insert coin and wait for loading. Turn steering wheel to choose favourite racing track.



- Collect gas bottle on the track to collect energy, press S key to boost. Try it on and be NO.1.

Operating manual

- ① **Steering wheel:** control direction
- ② **Transform Hand stick:** during game, when the energy bar is full, push the hand stick up or down to have special speed up
- ③ **S key:** Collect different prop and press S key to use the prop attack other competitor during game.



① **Steering wheel**



② **Transform Hand stick**



③ **S key**

4. Background Setting

4.1 How to enter into background setting

1. Unlock the screen(Picture 1), find the setting board. (Picture 2)



Picture 1



Picture 2

2. Under “Insert Coin” page, press middle key for 3 seconds to enter into setting menu.




Press to enter into setting menu


3. Press left or right key to choose, middle key to confirm. Please save data before quit.


4.2 Background menu


◀▶ Select OK option					
▶ Coins	1 2 3 4 5 6 7 8 9	Coins	Coin QTY for playing, 1~9 coin optional		
History account	103	Return	Clean	Account: history account can be cleared, general account can not be cleared.	
General account	103				
Senser correction					
Game reset	Clear account	Restore factory setting, clean credits, clean outstanding tickets.			
	Clear credit				
	Default setting				
	Exit				
Test	Test different functions				
Vibrate setting	Wake	Normal	Strong		
Save and quit	Yes	No	Please save the setting record before quit.		
V2.1.0					

Senser correction:

 
This is for steering wheel sensor correction. Under sensor correction item, press  to start.

1:Keep steering wheel straight status, press 

2:Turn to left most status, press 

3:Turn to right most status, press 


Then correction finish.

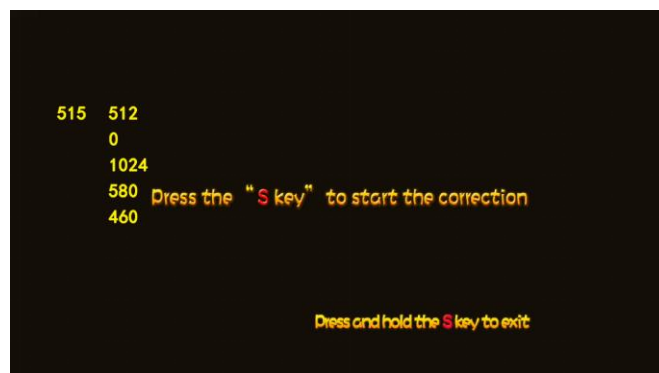

5.Quick Trouble Shooting


Machine can not boot, no electricity

 Please check whether 220V/110V power cable is connected well.

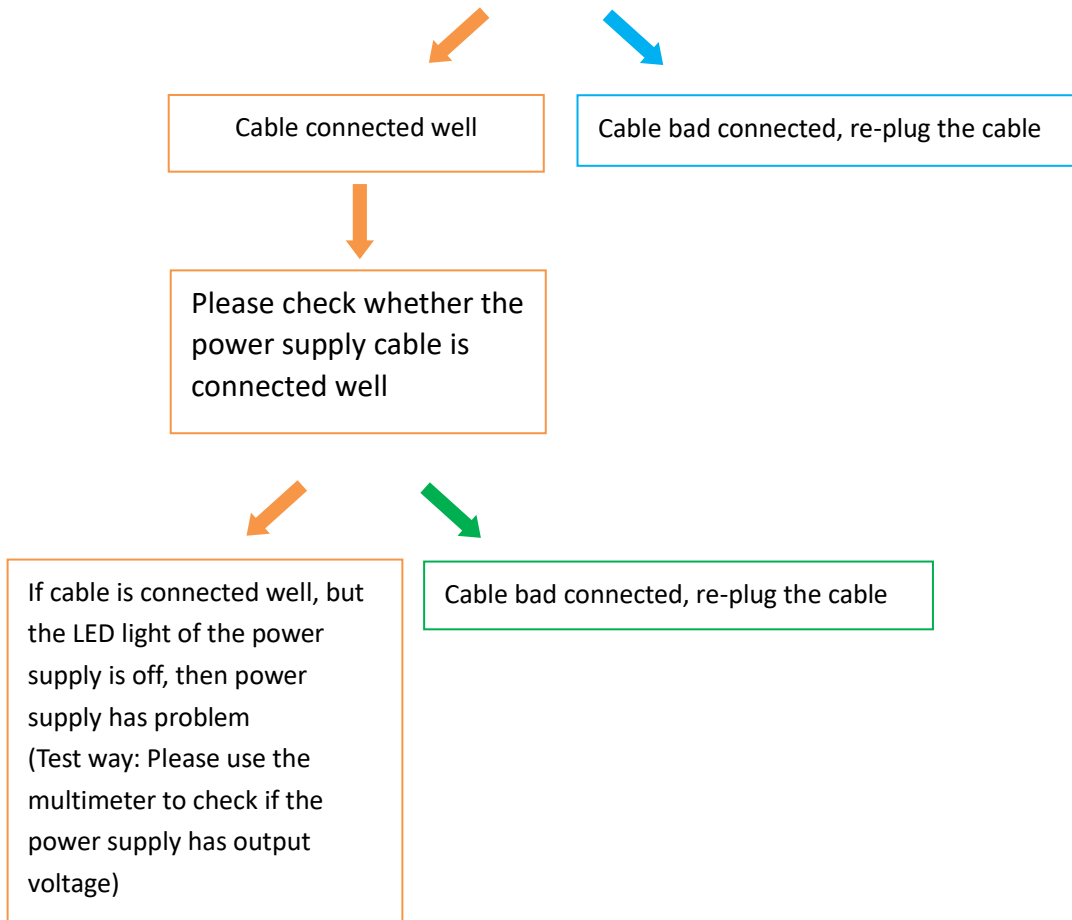


Power on machine, LED light is working, but monitor has no display.

 Please check whether the game box cable is connected well.

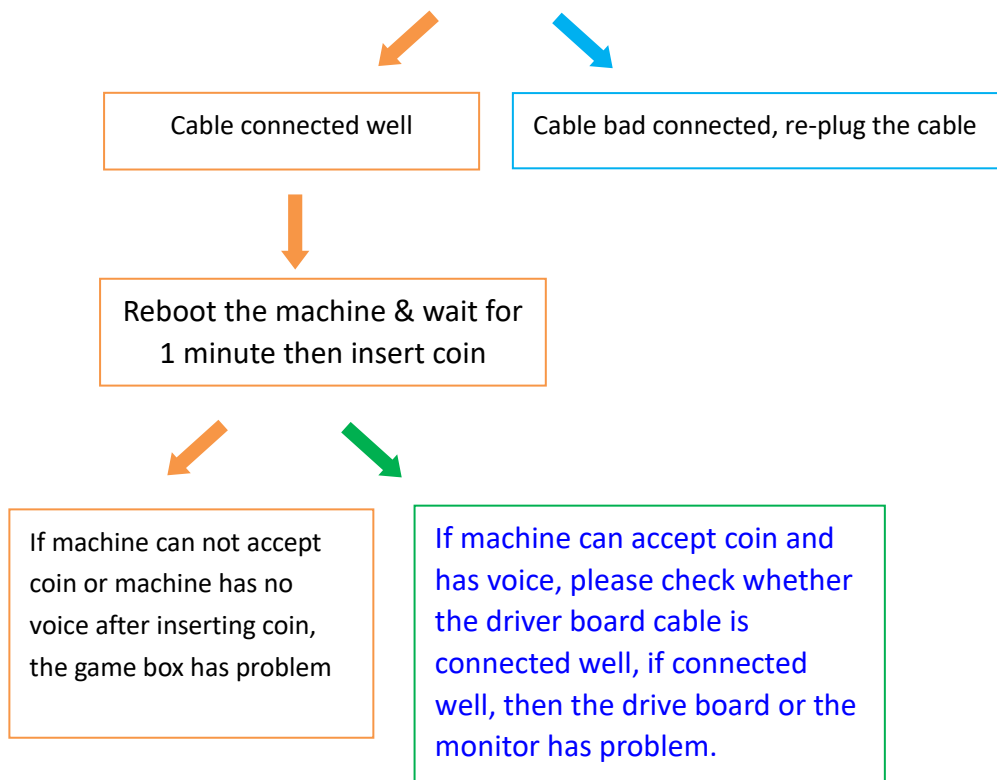


Machine has no voice during playing

 Please check whether the speaker cable was connected well.

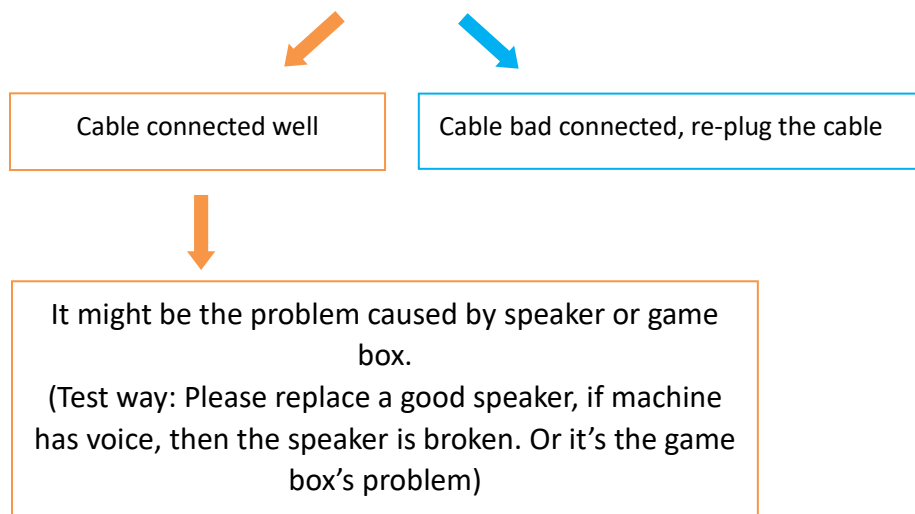

Coin acceptor can't accept the coin or accept coin but machine doesn't work

 Please check whether the coin acceptor cable is connected well.

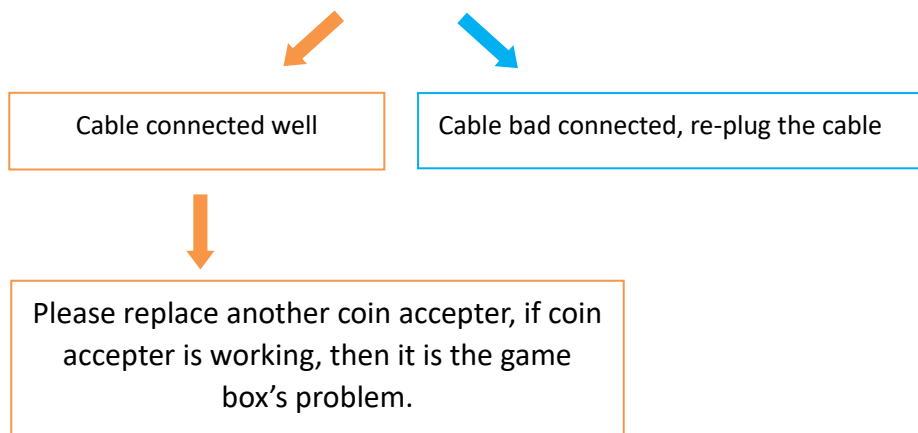

6.Warranty

Spare parts	Warranty
Game box	12M
Motor	12M
Drive board	12M
Monitor	6M

***Quality guarantee is not including: man-made damage, abnormal voltage & factors such as irresistible natural disasters**