



IMPORTANT



Be Sure
to Read this
Manual
Before Use



UNIS TECHNOLOGY

Operation Manual

WE ARE HERE TO ASSIST For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263

Email: service@unispartsandservice.com

www.unispartsandservice.com

When contacting Service, you will need the following information
and the name of your authorized distributor.

INDOOR MACHINE	
NAME: Toy Box 4P Mini GMP	MAX POWER: 465W
MODEL: T-408	MIN POWER: 325W
S/N:	FREQUENCY: 50/60Hz
VOLTAGE: AC110V ~	DATE:
Guangdong UNIS Technology Co.,Ltd.	

INDOOR MACHINE	
NAME: Toy Box 4P Mini GMP	MAX POWER: 465W
MODEL: T-408	MIN POWER: 325W
S/N:	FREQUENCY: 50/60Hz
VOLTAGE: AC220V-240V ~	DATE:
Guangdong UNIS Technology Co.,Ltd.	

CONTENT

IMPORTANT SAFETY INSTRUCTIONS	3
1. SPECIFICATIONS	5
2. CONTENTS OF THE ACCESSORY KIT	6
3. PART NAME	7
4. SET UP & INSTALLATION	8
5. HOW TO PLAY	12
6. GAME OPTION	13
7. TROUBLESHOOTING	17
8. MAINTENANCE & INSPECTION	18

Thank you for purchasing **Toy Box 4P Mini GMP**. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.

Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.

Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.

Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

⚠️ This product is an indoor game machine. Do not install outdoors.

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC110V 50/60Hz; AC220V 50/60Hz;

Min. Power consumption: 325W

Max. Power consumption: 465W


Dimension: H83.25×W28.93×D21.03 in

H2114.60×W735 ×D534.35 mm

Weight: Approximately 282.19lb/128 KG

Model No: T-408



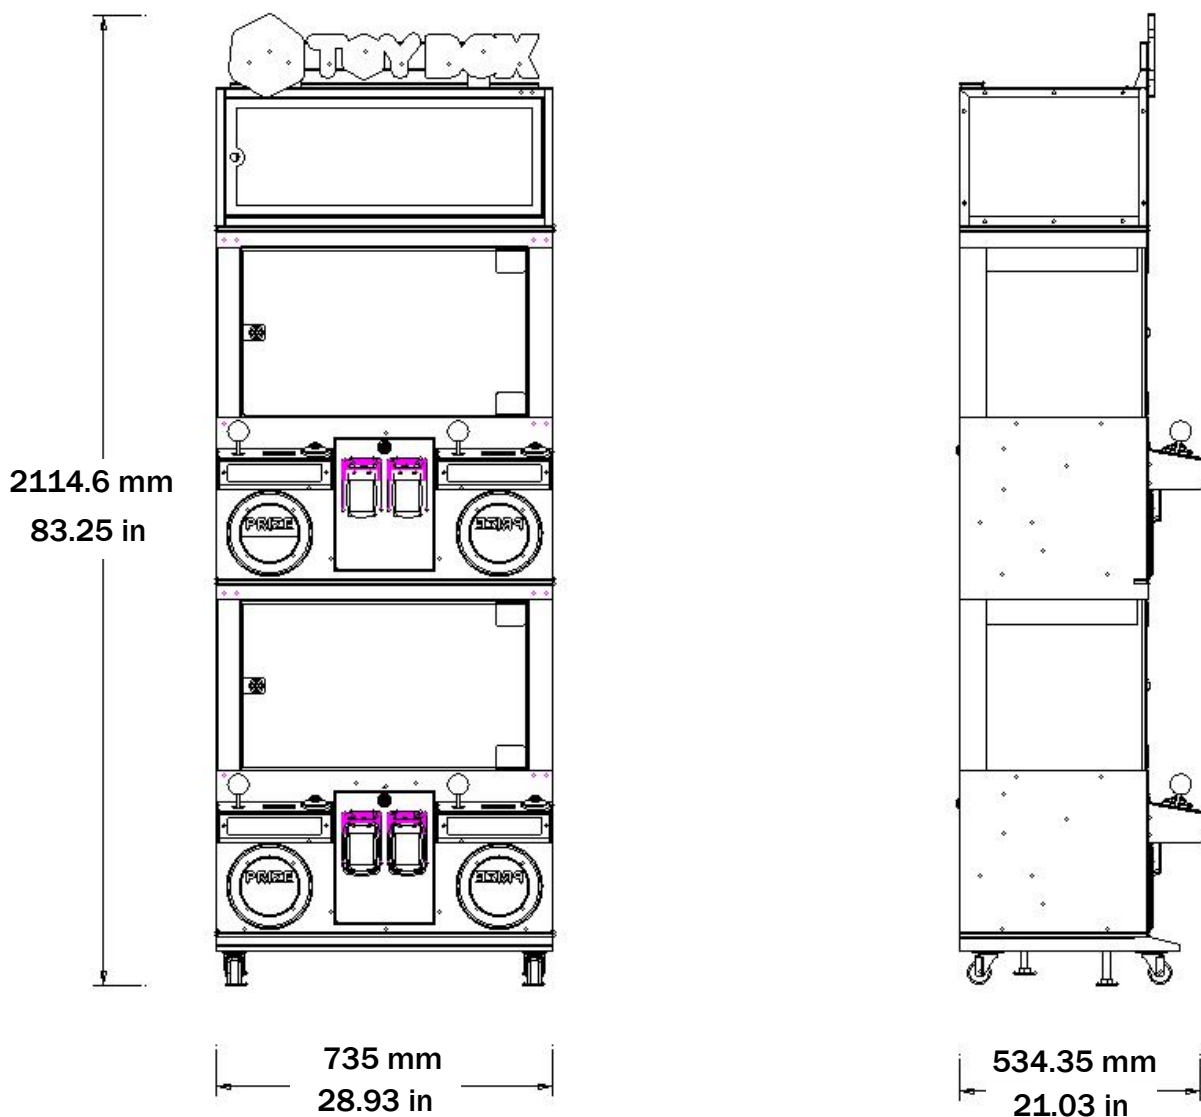



! NOTICE : After turning off the game, please wait at least 1 minute before restarting again.



2. CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included:


Following accessories

No.	Code No.	Name/SPEC	Picture	Qty
1	2.33.01.018024	Power cord 3×18AWG 3M		1
2	2.19.01.000012	Fuse(T5A) Φ5×20mm T5A/250VAC		1
3	2.53.00608837	1408A key		2
4	2.53.00608838	1408B key		2
5	/	Manual GMP		1
6	/	Fuse(T10A)		1

NOTE: Part models are subject to change without notice.

3. PART NAME

Key Components

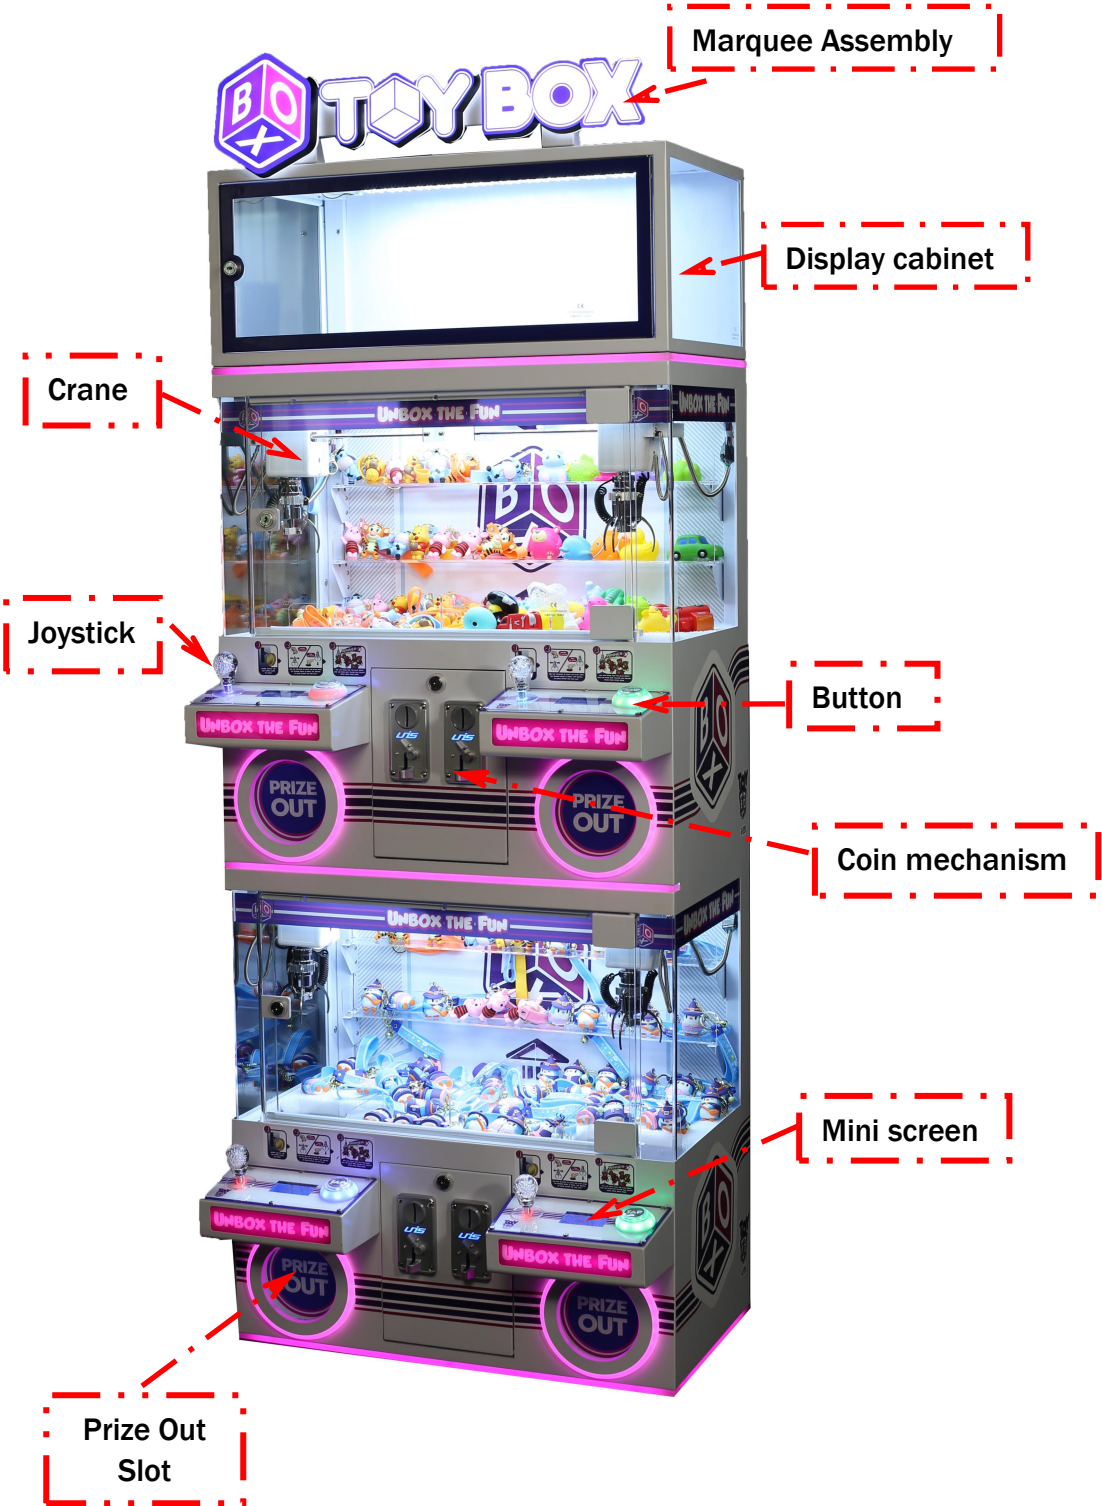

4. SET UP & INSTALLATION

⚠ NOTICE


We do not recommend using power tools as they may cause damage.

⚠ **This product is an indoor game machine. Do not install outdoors.**

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid.
- Place the unit on a dry level surface.
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position.

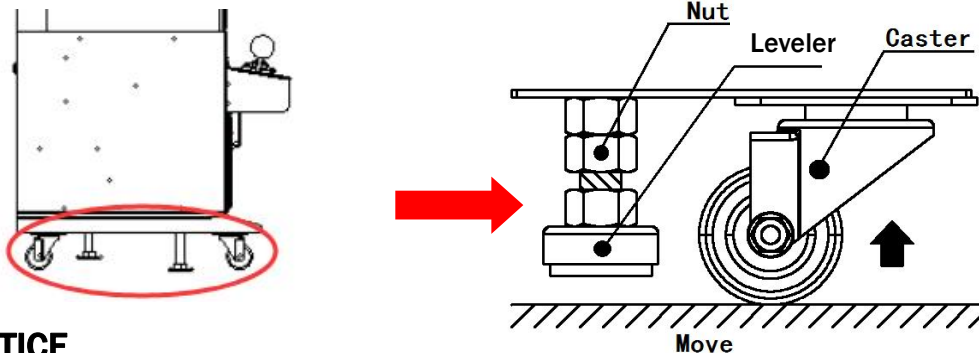


⚠ NOTICE

- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages.

4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in/5mm. Repeat the same for all levelers.

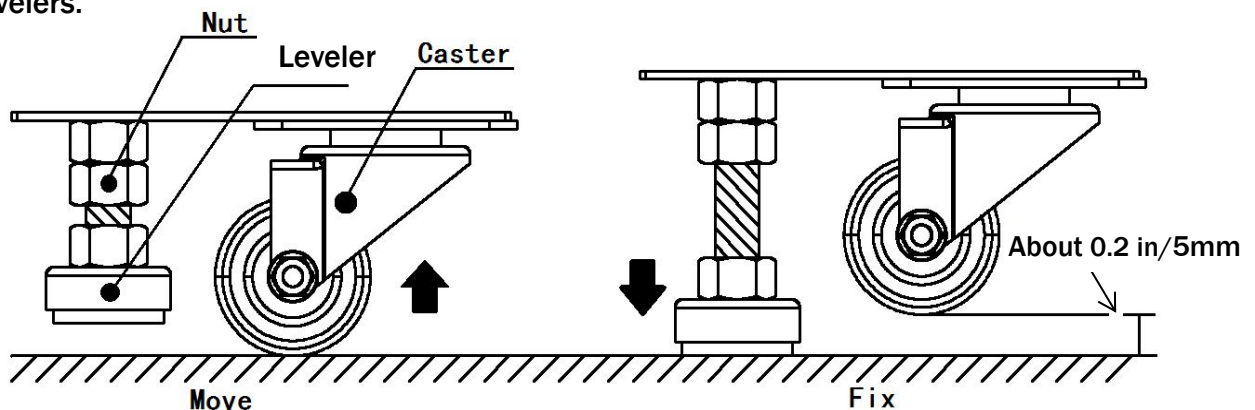

⚠ NOTICE


Make sure the machine is level.

4.3 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:

Service area: 20 in

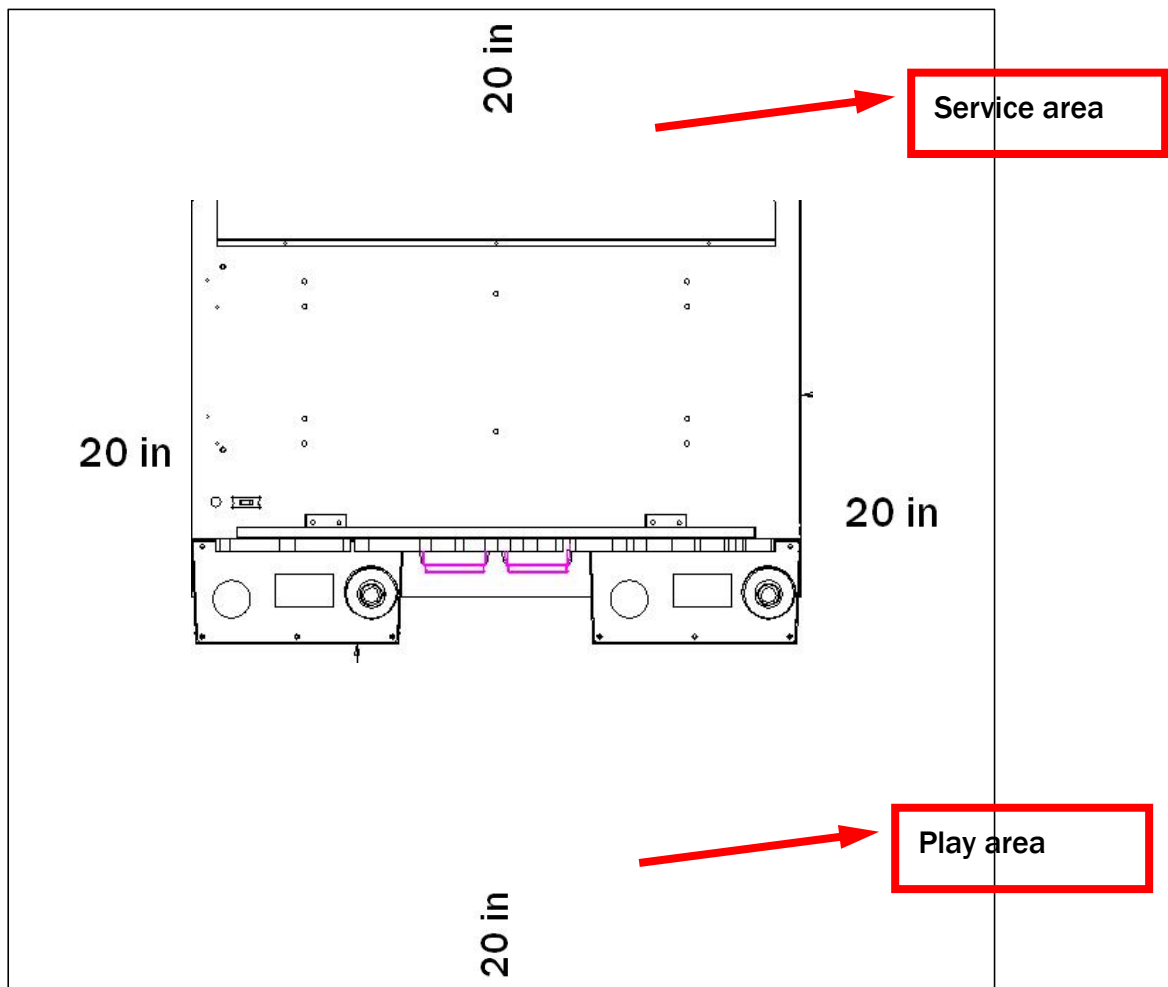


NOTICE

Your unit must be leveled to operate properly.


4.4 Machine Installation

Step 1 Install LOGO marquee to the top of the cabinet. Utilize screws to secure.

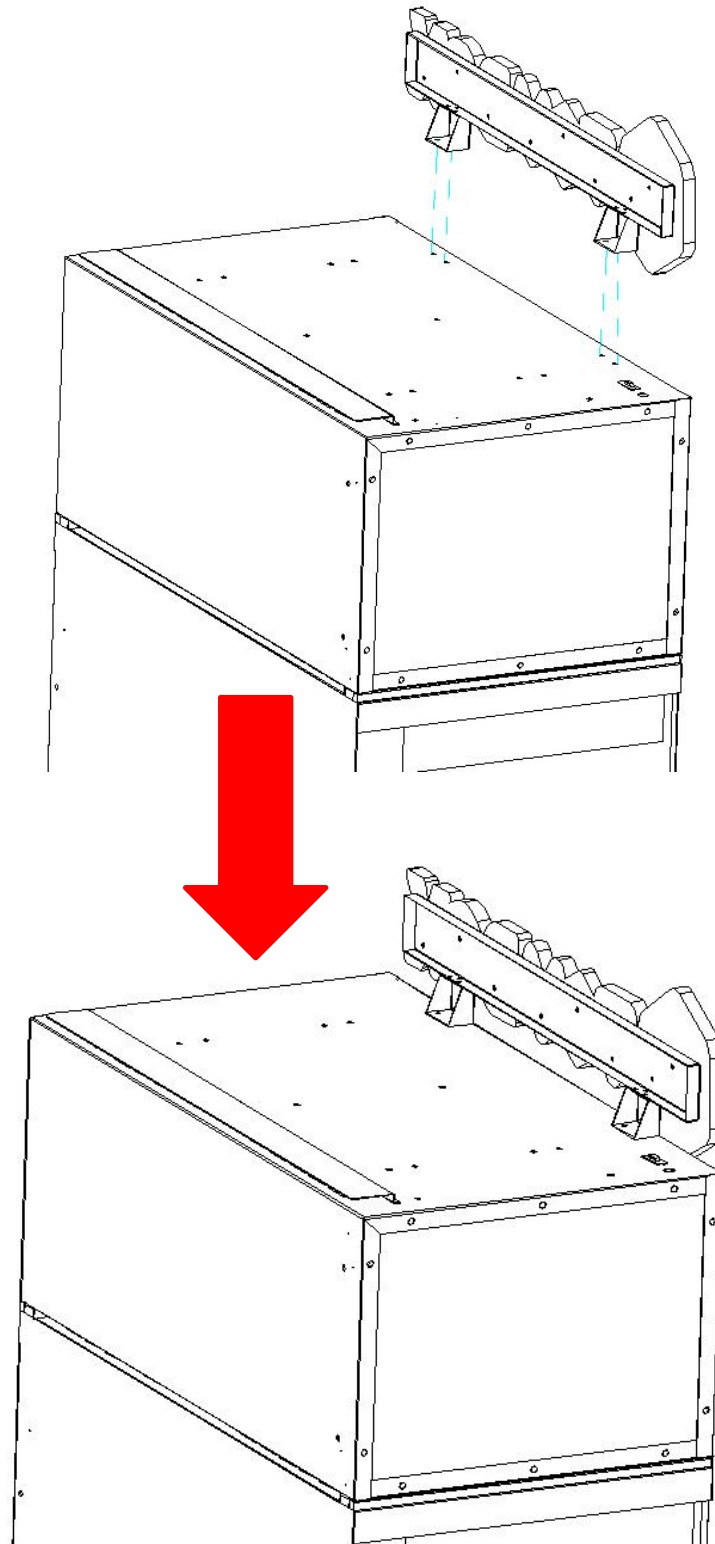

Finish!

4.5 Card Reader Installation Safety Notice


 Take precaution to assure that all wiring voltages are confirmed prior to installation of card reader. All warranties are void if not properly installed resulting in logic board damage.

Important: This game is pre-wired to AAMA standards. It is highly recommended to utilize this wiring for Card reader installation.

4.6 Voltage Conversion

Step 1 Power off the machine. Locate the Power supply.

Step 2 Toggle the Power supply and PC switch to 115V or 230V according to your need.

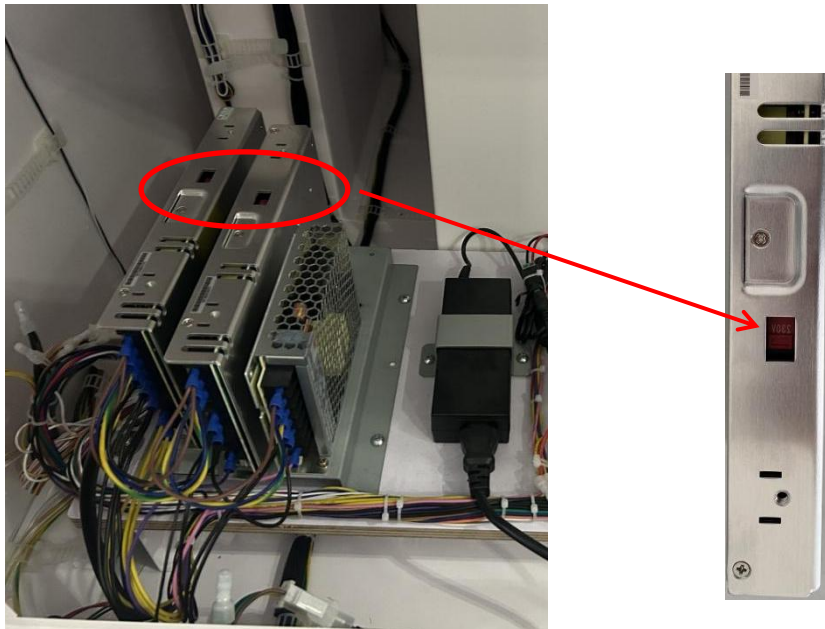


5. HOW TO PLAY

5.1 Insert coins or tap/swipe card to start.



5.2 Use the joystick to move the claw over the desired prize & press “TAP” button to grab within the time limit.

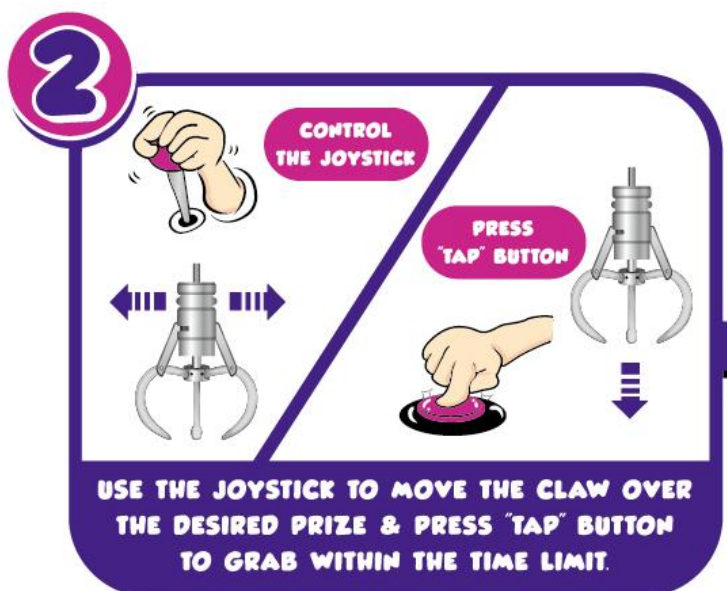

5.3 Win any prize that the claw drops into the prize box player can collect prize from prize door.



6. GAME OPTION

6.1 Adjustment button instruction

Open the coin door and there is a meter panel. Long press Service button for 5 seconds to enter the setting menu. Utilize Joystick to control setting menu UP/DOWN/LEFT/RIGHT. Press Tap **button** to confirm& back.

6.2 Setting menu

6.2.1 Main menu

No.	Options
1	Accounts
2	Profit
3	Feature
4	Hold pow
5	IO Test
6	Factory
7	Restore
8	Light Color
****Exit****	

6.2.2 Accounts

Options	Default	Adjustable range	Description
Current coin	0		
Current gift	0		
Accounts clr			
History coin	0		
History gift	0		
Exit			

6.2.3 Profit

Options	Default	Adjustable range	Description
N one time	1	1-10	Coins per game
Sel num	10	1-20	How many game round for 1 coins
N send	1	1-10,off	

Sensor	Off	On/Off	Player shake/tilt the machine will clear the coin.
selling	M1	M1/M2/M3	
Sel mode	UP	UP/CLR	
dis price	On	On/Off	
coins pice	1	1-3,10	
Exit			

6.2.4 Feature

Options	Default	Adjustable range	Description
Back music	1	1-7,loop	
game music	2	1-7,loop	
back volume	5	1-7,loop	
Auto time	15	5-60	
Free mode	Off	On/Off	
Exit			

6.2.4 Hold pow

Options	Default	Adjustable range	Description
Win holding	40	5-50	
Hold power 1	35	0-40	
Hold power 2	16	0-40	
Hold power 3	12	0-40	
Time 1	20	0-40	
Grip proba	1	0-99	
Strong T	0	0-99	
Down S	rand	Loop/inci/prop/away/heat/rand	
Exit			

6.2.5 IO test

Options	Default	Adjustable range	Description
M1 F A	On	On/Off	
M2 R L	On	On/Off	
M3 T D	On	On/Off	
sensors	Off	On/Off	
Exit			

6.2.6 Factory

Options	Default	Adjustable range	Description
Boot test	On	On/Off	
Length rope	30	0-99	
export gift	FR	-	
M1 Speed	50	10-50	
M2 Speed	50	10-50	
M3 Speed 1	50	10-50	
M3 Speed 2	55	10-50	
NO Error	on	On/Off	
CN\ENG	Engl	Engl/中文	
Exit			

6.2.7 Restore

Options	Default	Adjustable range	Description
Restore	No	No/Yes	
Exit			

6.2.8 Light Color

Options	Default	Adjustable range	Description
R Color	100	0-100	
G Color	100	0-100	
B Color	15	0-100	
Exit			

7. TROUBLESHOOTING

7.1 Common Problem

Please confirm that all connectors fit tightly.

Symptom	Possible Cause	Recommended action
Game will not start	Frame assembly connector is loose.	Check connector.
	Frame assembly fault	Contact with UNIS Service.
Power off	Circuit protector make power SW in off state.	Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service.
Card reader not working	The connector is loose.	Check connector.
	Card reader fault.	Check with card reader manufacturer.
No sound	Low volume	Raise the volume.
	Connector loose.	Check connector.
	Speaker fault.	Check speaker.
	POT installation error.	Install POT correctly.
	POT fault.	Change POT.
	Audio cable problem.	Reconnect the audio cable or change it.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components to ensure good working condition.
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to maintain proper operation.

8.2 Handling Precautions

When installing or inspecting the machine, be very careful and pay attention to ensure that the player can enjoy the game safely.

Inappropriate handling running counter to the cautionary matters can cause personal injury or damage to the machine.



NOTICE

We do not recommend using power tools as they may cause damage.

www.unistechnology.com